



## MAINTENANCE CARDS

### WHEELS

REMOVING FRONT DISC BRAKE WHEEL  
WHEEL ADAPTERS

## WARNING!

Always wear protective gloves and glasses while working on the bicycle.



**THIS TECHNICAL MANUAL IS INTENDED FOR USE BY PROFESSIONAL MECHANICS.**

Anyone who is not professionally qualified to assemble bicycles should not attempt to install and operate on the components because of the risk of carrying out incorrect operations that could cause the components to malfunction with the consequent risk of accidents, physical injury or even death.



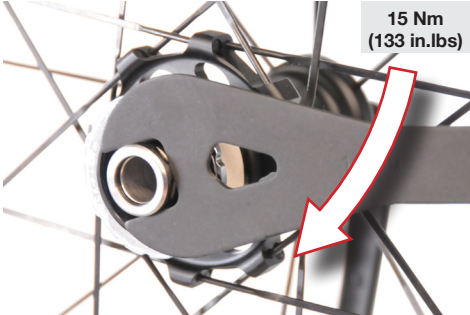
The actual product may differ from what is illustrated, as the specific purpose of these instructions is to explain the procedures for using the component.



# MAINTENANCE CARDS

GROUPSET	TYPE	REVISION	DESCRIPTION
ROAD WHEEL DISC BRAKE	CUP-AND-CONE	00/01/ 2022	REMOVING THE LEFT-HAND PIVOT ADAPTER

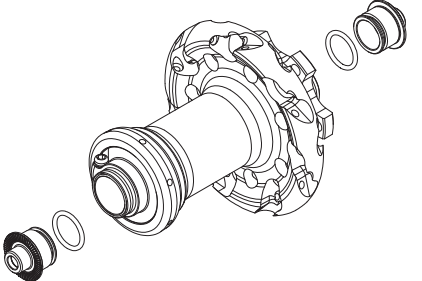
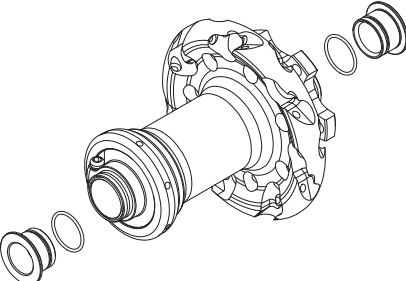
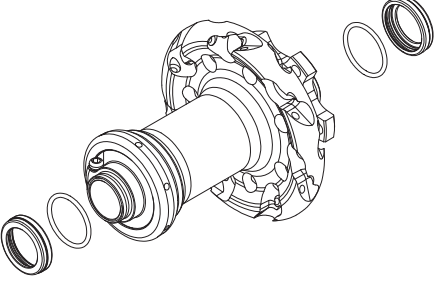
PRODUCTS TO WHICH THIS PROCEDURE APPLIES					
BORA ONE DB	SHAMAL ULTRA DB				

		
<p><b>1</b></p> <p>Removing the left-hand pivot adapter.</p> <p>Insert the tool (UT-WHDB001 or UT-WHDB002) on the right-hand side of the pivot.</p>	<p><b>2</b></p> <p>Loosen the left-hand adapter with the aid of an open-end spanner (18 mm flat spanner), paying attention to the spacer inside.</p>	<p><b>3</b></p> <p>Tighten the adapter again, with a torque of <b>15 Nm (133 lb-in)</b>.</p>

<ul style="list-style-type: none"> <li>It is possible to make the front hub compatible on the QR version by using: B0/SH front pivot kit for QR frame.</li> </ul> <p>Refer to the procedure "Removing and reassembly of the front hub - Operation 002".</p>		

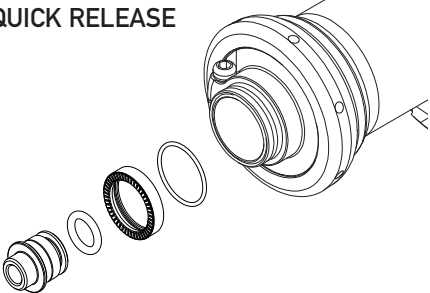
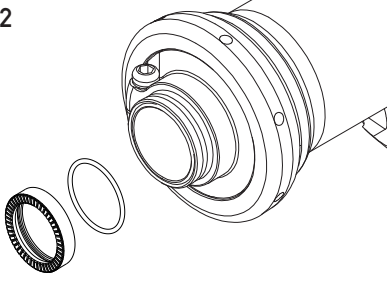
# MAINTENANCE CARDS

GROUPSET	TYPE	REVISION	DESCRIPTION
ROAD WHEEL DISC BRAKE	INDUSTRIAL BEARINGS	00/01/ 2022	REMOVING FRONT DISC BRAKE WHEEL ADAPTERS
<b>PRODUCTS TO WHICH THIS PROCEDURE APPLIES</b>			
SCIROCCO DB			

		
<p><b>1</b></p> <p>All adapter types, on both sides, slide out from the pivot.</p>	<p><b>2</b></p>	<p><b>3</b></p>

# MAINTENANCE CARDS

GROUPSET	TYPE	REVISION	DESCRIPTION
ROAD WHEEL DISC BRAKE	CUP-AND-CONE	00/01/ 2022	REMOVING FRONT DISC BRAKE WHEEL ADAPTERS
<b>PRODUCTS TO WHICH THIS PROCEDURE APPLIES</b>			
ZONDA DB			

QUICK RELEASE	HH12	
		
<b>1</b>	<b>2</b>	
<p>Both HH12 and Quick Release internal adapters slide out from the pivot on both sides.</p>		

# MAINTENANCE CARDS

GROUPSET	TYPE	REVISION	DESCRIPTION
ROAD WHEEL DISC BRAKE	CUP-AND-CONE	00/01/ 2022	REMOVING FRONT DISC BRAKE WHEEL ADAPTERS
<b>PRODUCTS TO WHICH THIS PROCEDURE APPLIES</b>			
BORA ULTRA WTO DB	BORA WTO DB	SHAMAL CARBON DB	

No front adapter is provided for these wheels.

- It is possible to make the front hub compatible on the QR version by using: BO/SH front pivot kit for QR frame. Refer to the procedure "Removing and reassembly of the front hub - Operation 002".