

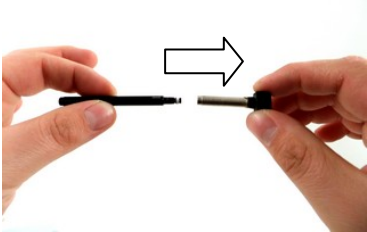
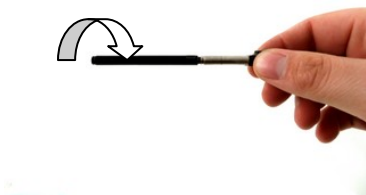

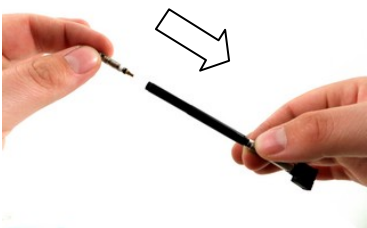

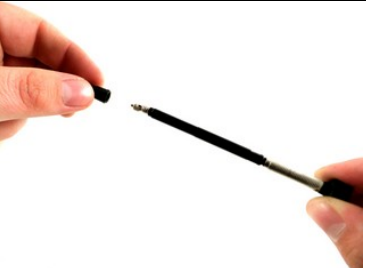
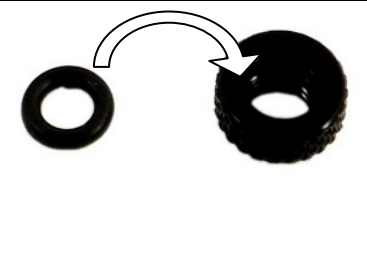


MAINTENANCE

GROUPSET		TYPE	OPERATION	REVISION	DESCRIPTION
ROAD WHEELS		CONE / CUP MOVEMENT	012	02/ 11 - 2017	MALE VALVE EXTENSION ASSEMBLY
PRODUCTS ON WHICH THE PROCEDURE SHOULD BE APPLIED					
Bora™	Bullet Ultra™	Bullet™			

		
<p>1 Remove the cap from the tires valve.</p>	<p>2 Loosen the valve using the designated wrench.</p>	<p>3 Get an extension of an appropriate size that fits the depth the rim in use.</p>
		
<p>4 Tighten the extension on the valve.</p>	<p>5 Fix the extension using the designated wrench.</p>	<p>6 Insert the valve removed earlier inside the body of the extension and tighten.</p>
		
<p>7 Fix the valve using the designated wrench.</p>	<p>8 Close the valve.</p>	<p>9 Fasten the valve to the rim using the designated knurled fixing ring nut. Insert the designated OR ring inside the ring nut before use.</p>