




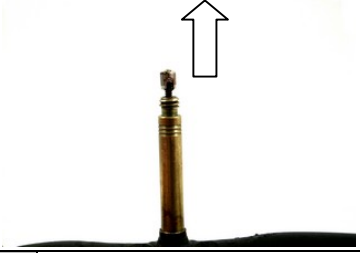

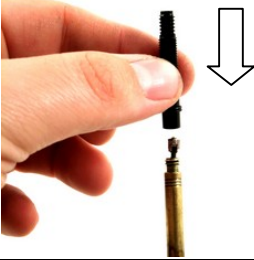
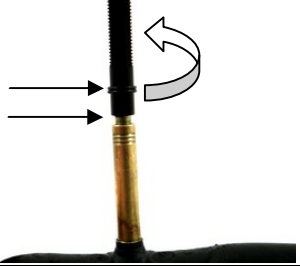
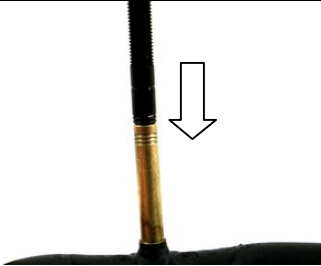





# MAINTENANCE

GROUPSET	TYPE	OPERATION	REVISION	DESCRIPTION
ROAD GROUPSETS	CONE / CUP MOVEMENT	013	1/2011	FEMALE VALVE EXTENSION ASSEMBLY
PRODUCTS ON WHICH THE PROCEDURE SHOULD BE APPLIED				
				
Bora™	Bullet Ultra™	Bullet™		

		
<p><b>1</b></p> <p>In case of valves with non-removable valve proceed as follows.</p>	<p><b>2</b></p> <p>Fully loosen the nut of the valve.</p>	<p><b>3</b></p>

		
<p><b>4</b></p> <p>Fix the ring nut using some pliers so that it is always in an open position.</p>	<p><b>5</b></p> <p>Get an extension of an appropriate size two to the profile of the rim in use.</p>	<p><b>6</b></p> <p>Tighten the extension on the valve by two turns</p>

		
<p><b>7</b></p> <p>Let the OR rings (2 pcs) that are inserted inside the extension fall into the housing of the valve.</p>	<p><b>8</b></p> <p>Fix the extension using the designated wrench.</p>	<p><b>9</b></p> <p>Tighten the valve.</p>


<p><b>10</b></p> <p>Fasten the valve to the rim using the designated knurled fixing ring nut. Insert the designated OR ring inside the ring nut before use.</p>