



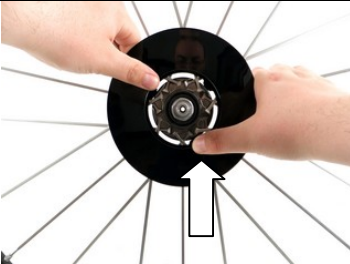



MAINTENANCE

GROUPSET	TYPE	OPERATION	REVISION	DESCRIPTION
ROAD GROUPSETS	ALL	011	1/2011	SPOKE GUARD ASSEMBLY
PRODUCTS ON WHICH THE PROCEDURE SHOULD BE APPLIED				
				
Zonda™	Scirocco™	Khamsin™		

		
1 Insert the spoke guard cover inside the body of the freewheel and attach two teeth of the right flange of the hub's body.	2 Attach the third tooth by exerting pressure on the cover.	3 Make sure the teeth are firmly attached.

SPOKE PROTECTORS

ZONDA	50-WH-SP13ZO
SCIROCCO	50-WH-SP13ZO
KHAMSIN	50-WH-SP2011KH